



All extendas fit neatly onto the mudguard to provide extra protection for the engine (and/or radiator) from road spray/grit. This simple and cost effective accessory helps cut down on the costs of bike maintenance. Each one is moulded to fit the curvature of the front mudguard giving it a natural look and fit.

**Available for virtually all models.**


MUA00141: R80R/R100R not Mystic  
MUA00142: F650 Funduro  
MUA00143: K1100LT  
MUA00144: R1100RS  
MUA00145: R850RT/R1100RT/R1150RT  
MUA00146: R850/R1100R  
MUA00147: R1100S/1150 Rockster  
MUA00148: R1200C  
MUA00149: F650ST  
MUA00150: R1150GS/Adventure  
MUA00151: R1150R  
MUA00152: R850GS/R1100GS  
MUA00153: F650CS 99-03 Single spark models only  
MUA00154: K1200LT  
MUA00155: Twins 1970-1984  
MUA00156: R1200GS 2004-2012  
MUA00157: R1200ST  
MUA00158: R1200RT  
MUA00159: K1200S/K1300S  
MUA00160: K1200R  
MUA00161: R1150RS  
MUA00162: K1200RS  
MUA00163: K1200GT 2002-05  
MUA00164: R1200R  
MUA00165: R1200S  
MUA00166: F800S/F800ST  
MUA00167: F800GS  
MUA00168: F650GS twin 2008 on  
MUA00169: K1200GT/K1300GT  
MUA00170: S1000RR  
MUA00171: G650GS  
MUA00172: F700GS  
MUA00173: R1200GS LC 2013 on  
MUA54240: R1200GS LC 2013 on Uber extenda  
MUA54240A: R1200GS LC 2013 on Uber extenda- CF  
MUA54241: R1200RS LC 2014 on  
MUA54236: R1200RT LC 2014 on  
MUA00174: F800R 2015 on  
MUA00179: R1200R 2011 to 2014  
MUA00180: Rnine T  
MUA54246: F750GS  
MUA54247: F850GS  
MUA54280: R1250RT 2018 on  
MUA54900: F900XR & S1000XR 2020 on




Motorworks (UK) Ltd Registered in England No. 07180735  
Registered Office: The Old School House, Meltham Mills Road,  
Meltham, Holmfirth, West Yorkshire HD9 4AT, England  
+44 (0) 1484 353600

**motorworks.co.uk**


### | Push-Rivet | Extenda Fenda & Hugger Extension Fitting Instructions

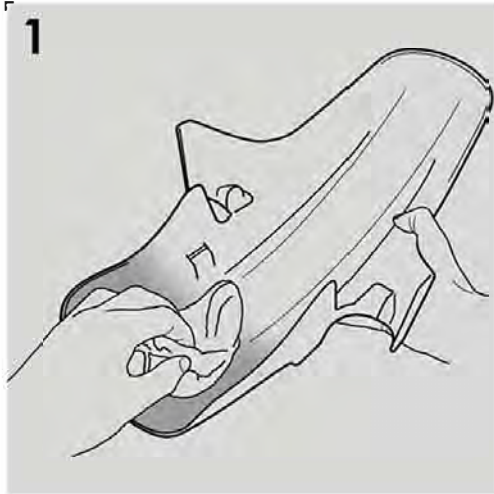


1 Remove mudguard from bike & clean inside.

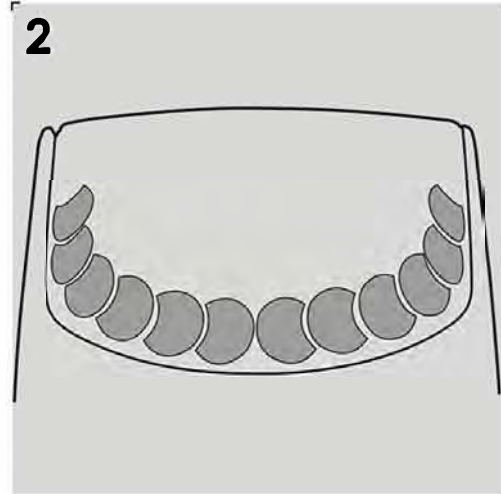


2 Attach a few Stick-Fit pads to the Extenda Fenda/Hugger Extension in area shown to create a gasket.

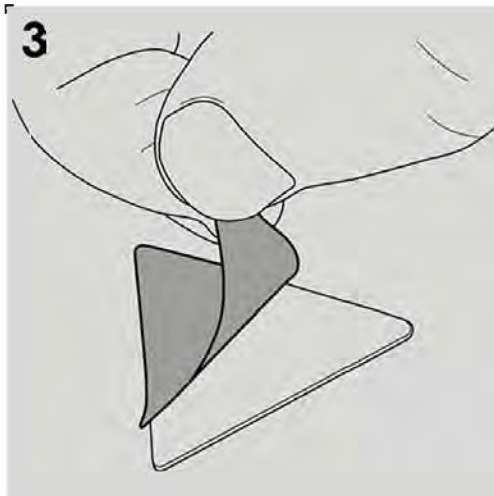


3 Peel backing paper from Stick-Fit pads.

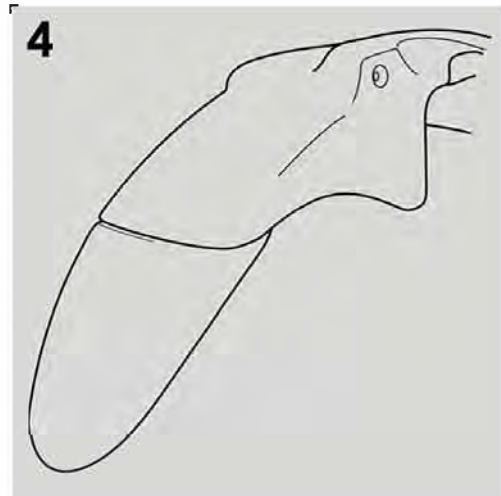

4 Fit Extenda Fenda/Hugger Extension to mudguard.

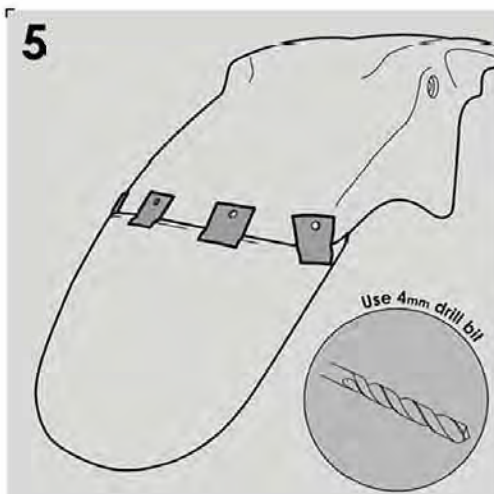


5 Use masking tape to mark equally spaced drilling points.  
Drill through the Extenda Fenda/Hugger Extension & mudguard at each point.

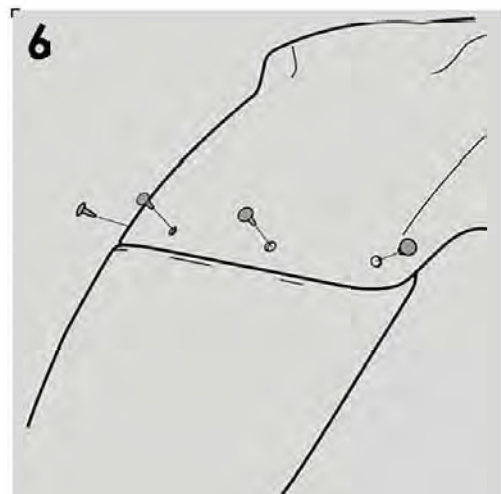


6 Fit Push-Rivets provided and re-fit mudguard to bike.


### | Stick-Fit | Extenda Fenda & Hugger Extension Fitting Instructions

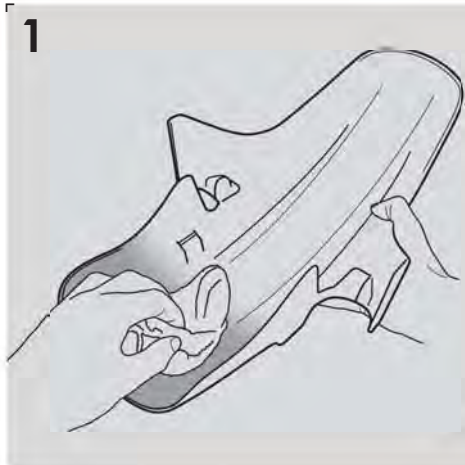


1 Remove mudguard from bike & clean inside.

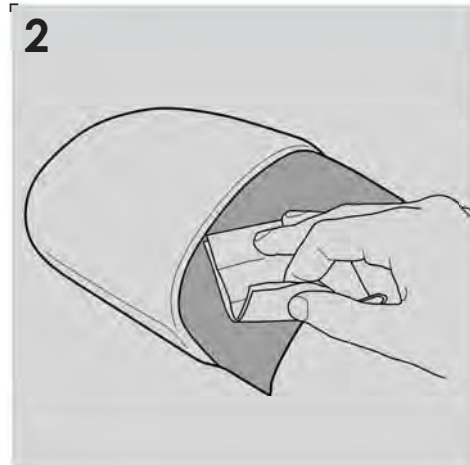


2 Prime Extenda Fenda/Hugger Extension in area shown with wipe supplied.

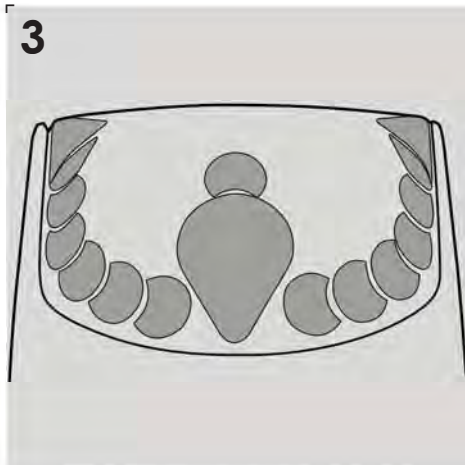

3 Attach Stick-Fit pads to the Extenda Fenda/Hugger Extension using this diagram as a guide. Avoid recesses & corners in the moulding as this will effect the fit.

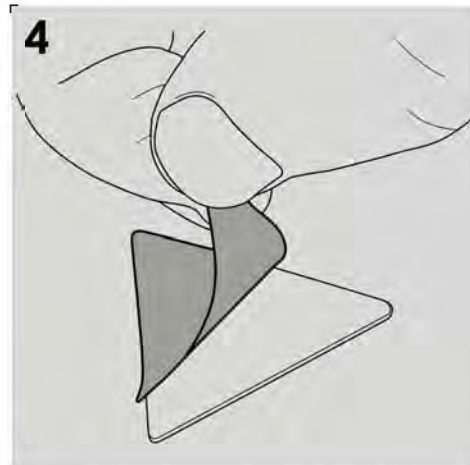

4 Peel backing paper from Stick-Fit pads.

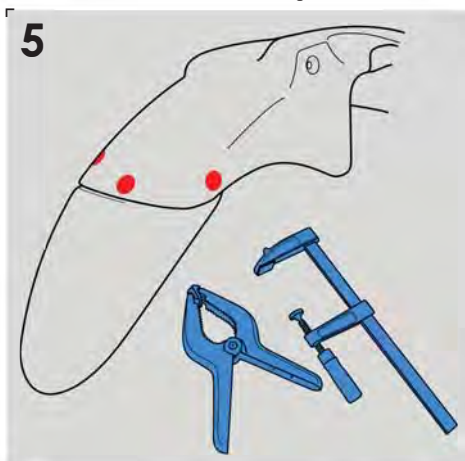

5 Fit Extenda Fenda/Hugger Extension and apply pressure evenly. Pyramid suggest using clamps as shown in blue. (Applying pressure on the central and outer edges is crucial).



6 Allow to cure for 12 hours. Re-fit mudguard to bike.