




**FITTING INSTRUCTIONS FOR BLP0047BK REAR FOOTREST BLANKING
PLATE**
BMW S1000 XR 2015 - WILL FIT RIGHT AND LEFT HAND SIDES



THIS KIT CONTAINS THE ITEMS PICTURED AND LABELLED BELOW.
DO NOT PROCEED UNTIL YOU ARE SURE ALL PARTS ARE PRESENT.

Please note that the way the kit is packed does not necessarily represent the way of mounting to the bike

THE PARTS SHOWN MAY BE REPRESENTATIVE ONLY (FOR CLARITY OF INSTRUCTIONS ONLY)

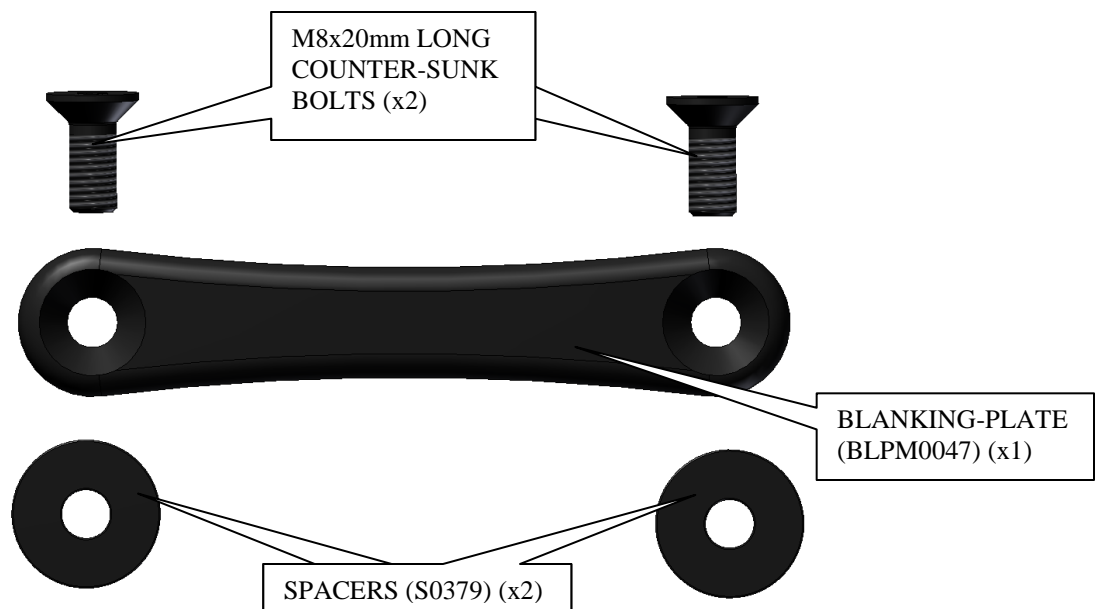



Please note that in cases where kits are packed with rubber washers holding the components onto the bolt – *the rubber washers should be thrown away!*

TOOLS REQUIRED

- 5mm metric Allen key.
- T45 Torx key.

Left or right hand side (as you sit on bike)

- Using T45 Torx key remove the two bolts and remove rear footrest.
- Fit two of the counter sunk headed bolts through the blanking plate so head sits in the counter-sink.
- Place the two spacers over the exposed ends of the bolts.
- Offer assembly up to bike and engage both bolts
- Tighten evenly using 5mm Allen key.




Instructions de montage BLP0047BK Plaques d'obturation des repose-pieds
BMW S1000 XR 2015 COTE DROIT ET GAUCHE



Le kit contient les articles exposés ci-dessous, vérifier que toutes les pièces soient présentes avant de procéder au montage.

LA FAÇON DONT LE KIT EST EMBALLE NE CORRESPOND PAS FORCEMENT A LA FAÇON DE MONTER LES PIECES SUR LA MOTO.

LES PARTIES PRESENTEES PEUVENT ETRE UNIQUEMENT REPRESENTATIVES (POUR LA CLARTE DES INSTRUCTIONS UNIQUEMENT)

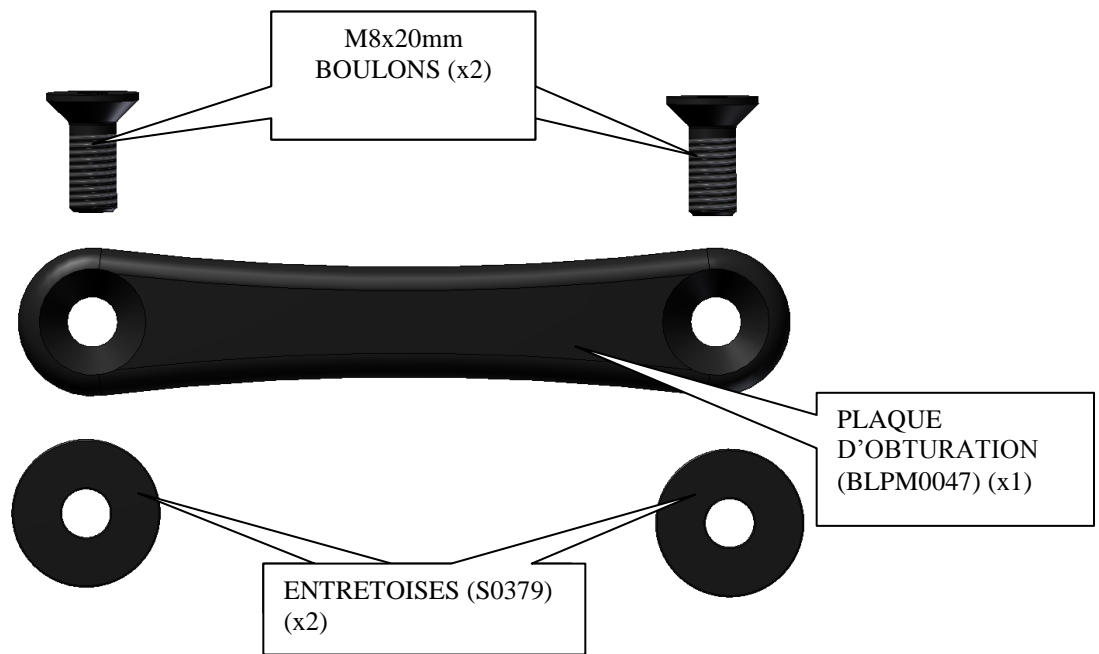



Notez que si les kits sont emballés avec des rondelles en caoutchouc servant à tenir les composants, *ces rondelles doivent être jetées.*

OUTILS REQUIS

- Clé Allen 5mm
- Clé Torx T45

Coté gauche ou droit (lorsqu'on est assis sur la moto)

- A l'aide d'une clé T45, enlever les 3 boulons et enlever le repose pied arrière.
- Insérer 2 des boulons dans la plaque d'obturation, de façon à ce que la tête se place dans le contre alésage.
- Placer les 2 entretoises sur les extrémités des boulons.
- Installez l'ensemble sur la moto, et engagez les 2 boulons.
- Serrer de façon égale, à l'aide d'une clé 5mm.