




**FITTING INSTRUCTIONS FOR BP0002BK BASH PLATE
HUSQVARNA NUDA 900 2012-, BMW F650GS 2008- AND F800GS 2008-**



PLEASE NOTE THAT THE WAY THE KIT IS PACKED DOES NOT NECESSARILY REPRESENT THE WAY OF MOUNTING TO THE BIKE

YOU WILL REQUIRE THE FOLLOWING TOOLS.

- 5mm METRIC ALLEN KEY.

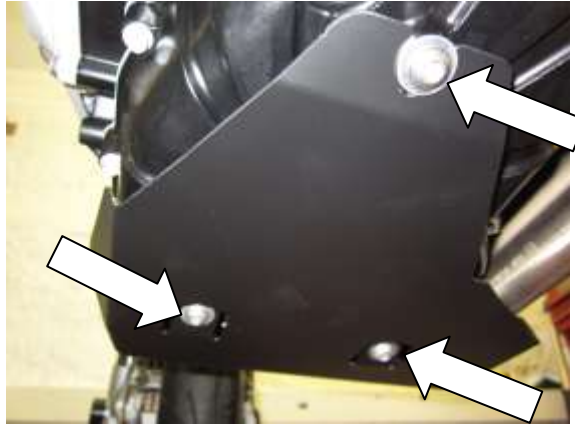

INSTRUCTIONS.

- OFFER THE BASH PLATE INTO POSITION AS SHOWN IN TOP PICTURE.
- USE THE THREE BOLTS AND WASHERS FROM KIT TO SECURE IN POSITION AS ARROWED IN THE ABOVE PICTURE.




**INSTRUCTIONS DE MONTAGE
BP0002BK PLAQUE DE PROTECTION
HUSQVARNA NUDA 900 2012-, BMW F650GS 2008- ET F800GS 2008-**



LA FAÇON DONT LE KIT EST EMBALLE NE REPRESENTE PAS FORCEMENT LA FAÇON DE MONTER LES PIÈCES SUR LA MOTO

Vous aurez besoin des outils suivants:
5mm METRIC ALLEN KEY.

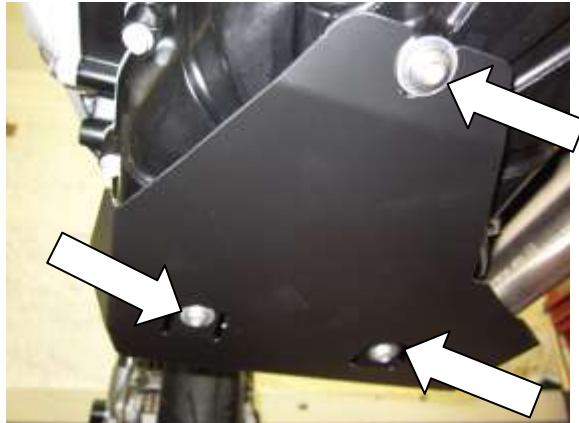

INSTRUCTIONS:

- Mettre la protection sur la moto
- Utiliser les 3 boulons et les rondelles du kit pour fixer la protection en position comme sur la photo du haut .