



**EVOTECH**<sup>®</sup>  
P E R F O R M A N C E


BMW S 1000 RR  
Bar End Weights


Installation Instructions





Kit Contents PRN014350


- Ⓐ 2 x Bar Ends Weights
- Ⓑ 2 x M8 x 40mm Caphead

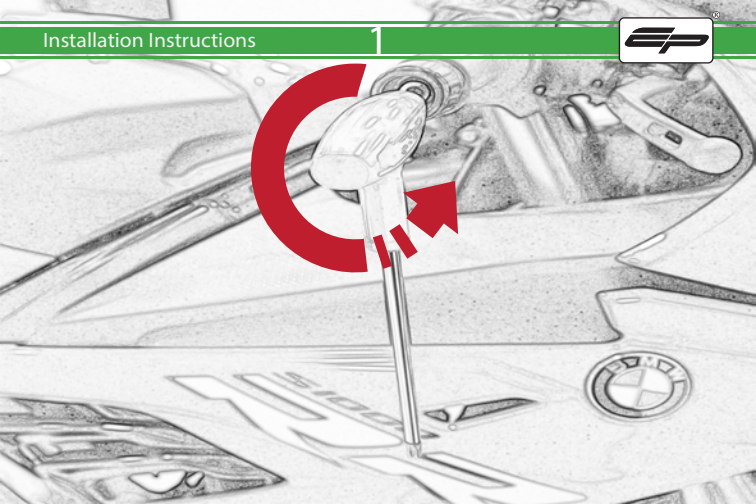

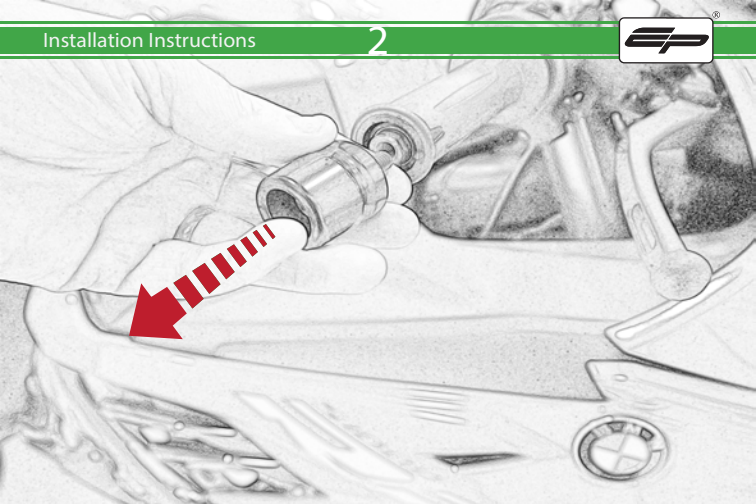

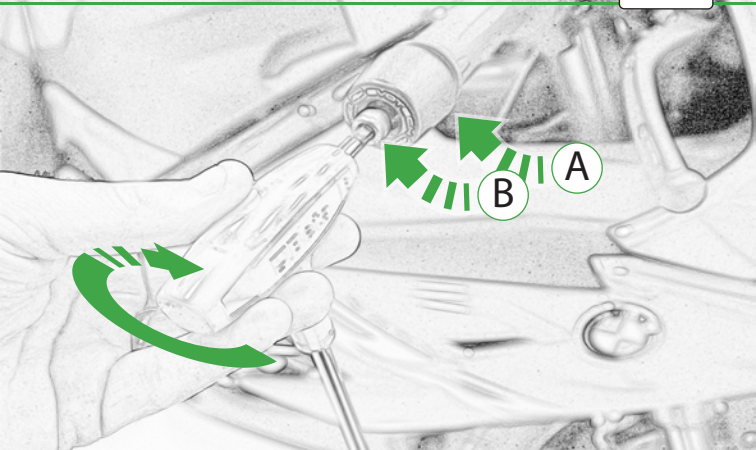

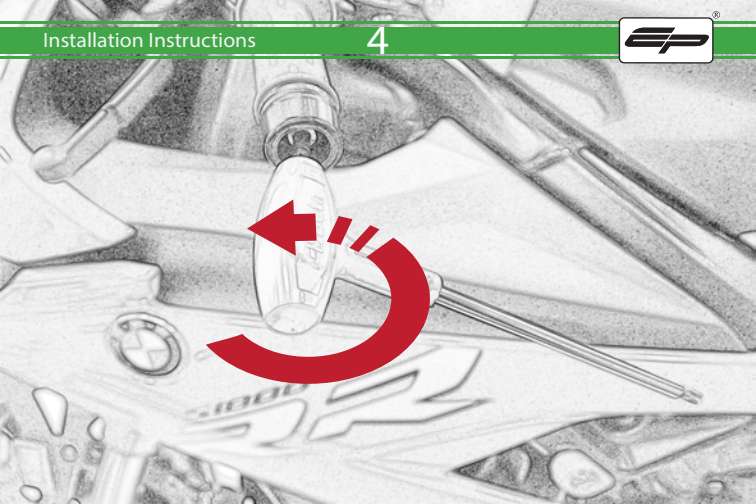

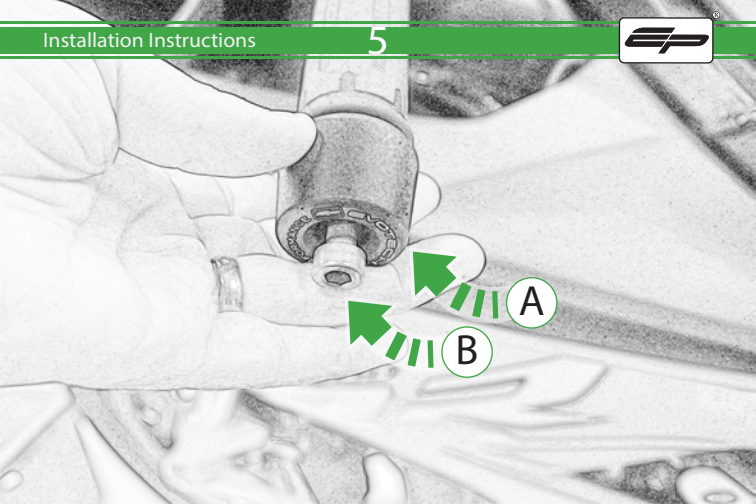







 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)