

HYPERPRO

LOWERING KIT / VERLAGINGSSET


for

BMW K 1200 R, S
Models '05> (K12)

LK-BM12-001-25 PART LIST

LINK0027 - Lowering link/ verlagingslink	2
-	-
-	-
-	-

ALL IDEAS, DESIGNS, ARRANGEMENTS AND PLANS INDICATED OR REPRESENTED BY THIS DRAWING ARE OWNED BY HYPERPRO AND WERE CREATED, EVOLVED AND DEVELOPED FOR USE ON AND IN CONNECTION WITH THE SPECIFIC PROJECT. NONE SUCH IDEAS, DESIGNS, ARRANGEMENTS OR PLANS SHALL BE USED BY OR DISCLOSED TO ANY PERSON, FIRM OR CORPORATION FOR ANY PURPOSE WHATSOEVER WITHOUT THE WRITTEN PERMISSION OF HYPERPRO.

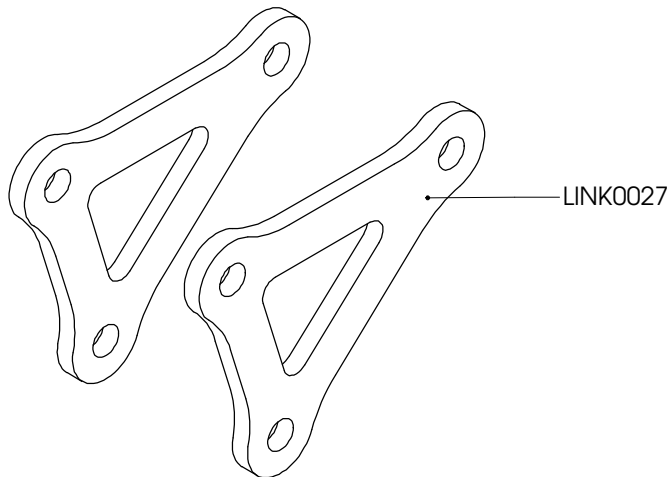

Inbouw handleiding

ACHTERZIJDE

De bestaande links vervangen door de HYPERPRO verlagingslinks. Let er hierbij op dat de pijl boven in de rijrichting wijst. Het achterwiel eerst belasten voordat de link vastgezet word.

LET OP! DE ZIJSTANDAARD EVENTUEEL ± 10 mm INGEKORTEN.

Instruction manual

REAR

Replace the original link by the HYPERPRO lowering link. Make sure the arrow above is pointing in the riding direction. Put some pressure on the rear wheel before tightening the link.

WARNING! IT MAY BE NECESSARY TO SHORTEN THE SIDE-STAND ± 10 mm.

See **WWW.HYPERPRO.COM** for more info about our products.